



## S55 - Oil Catch Can Install Guide

Last Updated: May 25, 2019

Use subject to terms and conditions posted at <http://www.burgertuning.com/terms.html>

THIS PART IS LEGAL FOR USE ONLY IN COMPETITION RACING VEHICLES AS DEFINED UNDER CALIFORNIA LAW, AND IS NOT LEGAL FOR USE IN ANY OTHER MOTOR VEHICLE. California law defines a "racing vehicle" as "a competition vehicle not used on public highways." (Calif. Health & Safety Code 39048) This part may only be used on competition racing vehicles operated exclusively on a closed course in conjunction with a sanctioned racing event. Competition-only motor vehicles may not be driven to a racing event on a public highway and must be transported on a trailer or other carrier. USE OF THIS PART IN ANY OTHER VEHICLE MAY SUBJECT YOU TO FINES AND PENALTIES FOR VIOLATION OF FEDERAL AND/OR STATE LAW, WILL VOID YOUR WARRANTY FROM BURGER MOTORSPORTS, LLC, AND CAN VOID YOUR VEHICLE'S WARRANTY. It is your responsibility to comply with all applicable federal and state laws relating to use of this part, and Burger Motorsports, LLC hereby disclaims any liability resulting from the failure to use this part in compliance with all applicable federal and state laws.

**Tools needed:** Flathead Screwdriver, 13mm wrench or socket, 4mm hex/allen wrench


1. Remove the //M engine cover by pulling up on each of the 3 corners with medium force.



# S55 - Oil Catch Can Install Guide



2. Remove the PCV hose by wiggling it lightly side to side while pulling on it. Use a flathead screwdriver to press the inner tabs that secure it to the valve cover. See below.

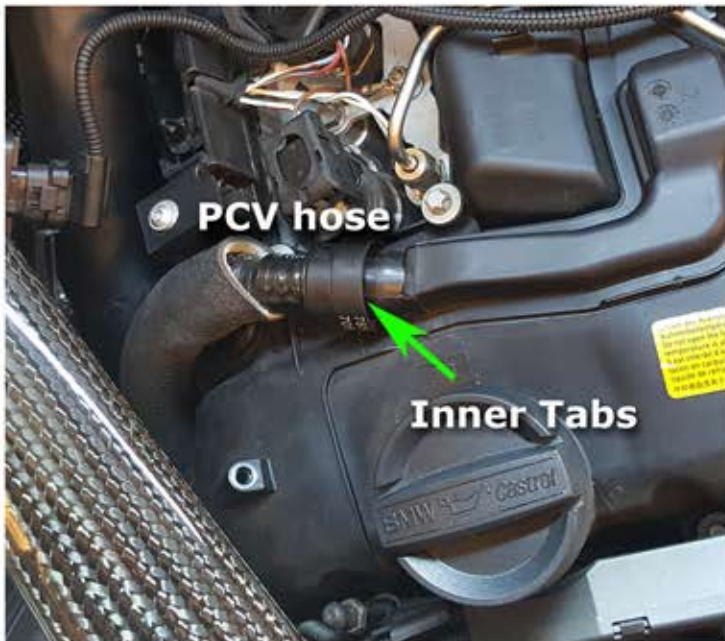

**Push Tabs with Screwdriver while pulling**

**Oil catch can**

2. Loosely bolt the bracket to the top of the catch can with the (2) included 4mm silver allen/hex bolts.

3. Remove the 13mm bolt on the chassis and attach the bracket and the catch can.

4. Clip the PCV hose on the larger "OUT" nozzle of the catch can. Then attach the silicone hose to the "IN" nozzle on the can and slide it over the opening in the valve cover. No hose clamps are needed. The PCV system in low pressure.

5. Replace the engine cover and tighten the silver allen/hex bolts and you're done with the install.



**Silicone hose**

**Bracket**

